




Removal of Temporary Lock

Temporary Lock currently as shown in A1 & A2

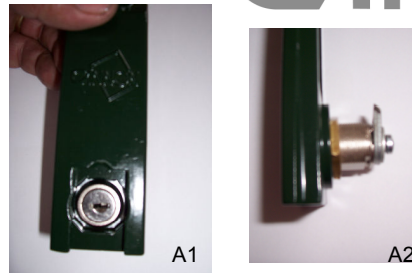

To remove:


1. Remove cam by undoing screw at rear of lock
2. Undo brass nut and remove (as shown in B)
3. Push lock out completely (should now look like C)
4. Remove conversion washer (shown in C)
This will knock out if you tap the washer from rear.
It comes out from the front of lock handle

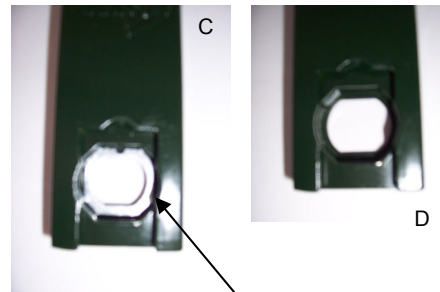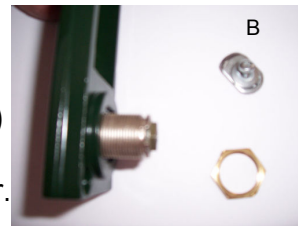

Conversion washer must be removed


Retrofitting of O2 Kabba Lock

Lock as shown in E.

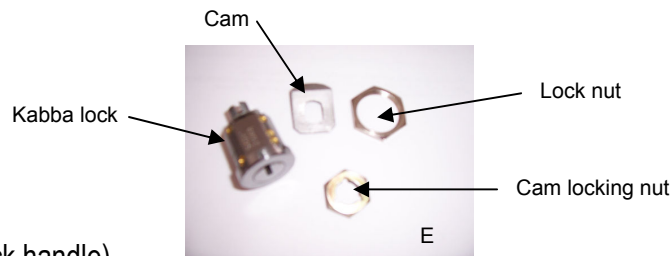


To fit:

1. Insert Kabba lock (from front of lock handle)
So that it appears as shown in F.
2. Add lock nut as shown in G
3. Add cam, with lip facing towards front of lock and lip at top, as shown in H
4. Add and tighten cam locking nut
HAND TIGHTEN ONLY!

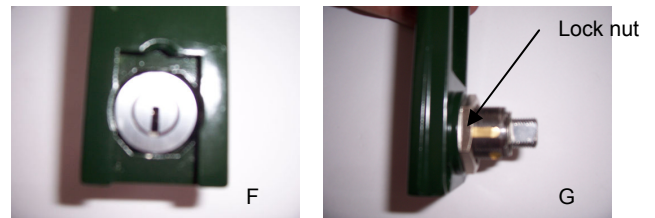

Lock retro fit complete

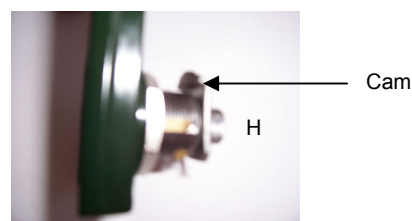

If you have any queries please contact:
Ron Tanihatu @ Cannon
Mobile: 07968 564772